


Strobe light, 135° 12/24V

Instruction manual

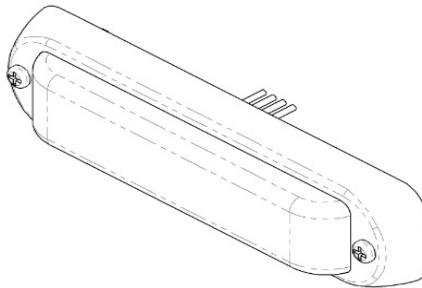

FEATURES

- Two mounting holes, accessible from the front or rear side of the lamp
- Operating voltage 10~30 VDC
- 14 flash patterns

OPERATING INSTRUCTION

- Connect RED wire to + VDC – Fuse @2A.
- Connect BLACK wire to chassis ground.
- Tap BLUE wire to BLACK wire quickly to select next flash pattern.
- Tap BLUE wire to BLACK wire for more than 5 sec. to turn the unit off.

SYNCHRONISED FLASH

- Connect YELLOW wires of all units together and set all units to the required synchronised pattern.

ALTERNATE FLASH

- Connect YELLOW wires of all units together and set all units to either phase 1 or phase 2 of that alternate pattern. Units set on phase 1 will alternate with units set on phase 2.

FLASH PATTERN

PA1	ECE R65 120FPM Single Flash P1
PA2	ECE R65 120FPM Single Flash P2
PA3	ECE R65 120FPM Double Flash P1
PA4	ECE R65 120FPM Double Flash P2
PA5	ECE R65 120FPM Quad Flash P1
PA6	ECE R65 120FPM Quad Flash P2
PA7	Single Flash 75 (SIM) P1
PA8	Single Flash 75 (SIM) P2
PA9	Double Flash 75 (SIM) P1
PA10	Double Flash 75 (SIM) P2
PA11	Quad Flash 75 (SIM) P1
PA12	Quad Flash 75 (SIM) P2
PA13	Steady
PA14	Off